


IN SINK ERATOR®

INSTALLATION, CARE & USE MANUAL COMMERCIAL DISPOSER

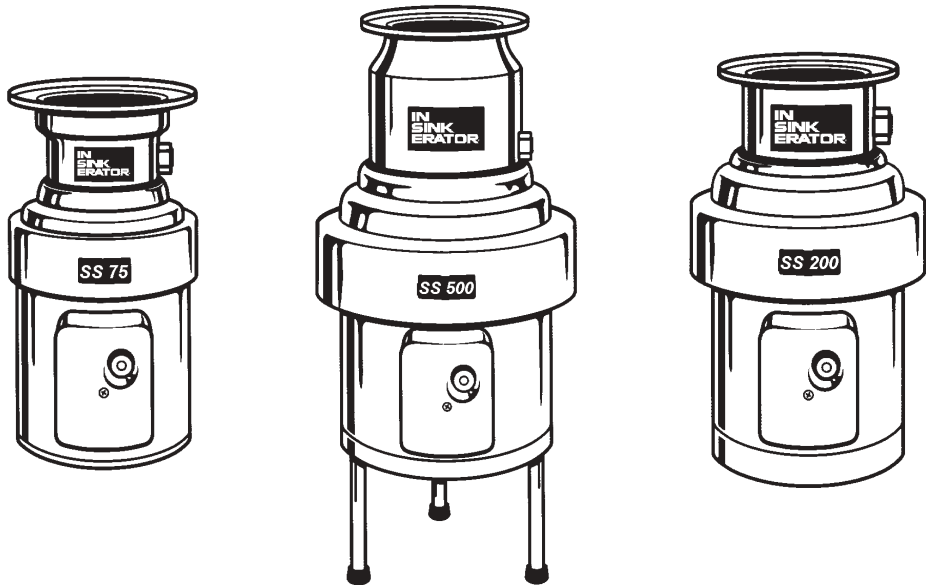

⚠ DANGER

DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

⚠ WARNING

WARNING indicates a potential hazardous situation which, if not avoided, could result in death or serious injury.

⚠ CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

Ensure that the person installing the disposer carefully reads and understands the safety instructions in this manual.

Table of Contents

Introduction	2
Typical Installation	
Clean the Drain Line	
Required Tools/Materials	
Installing the Disposer	3
Required Mounting Area	
Mounting Adaptors	
Standard In-Sink-Erator Mountings	
Special In-Sink-Erator Mountings	
Plumbing	6
Drain Line Connections	
Routing Water Flow	
Water Supply Connections	
Electrical	7
Electrical Safety	
Electrical Connections	
Operating Instructions	8
Operating the Disposer	
Grinding Tips	
Troubleshooting	9
Wiring Diagrams	10
Electrical Connections	
Manual Starting Switches	
Single Phase Manual Reversing Switches	
Three Phase Manual Reversing Switches	
Standard Motor Connection Wiring Diagrams	

Commercial Disposer Limited Warranty

The In-Sink-Erator Commercial disposers are warranted against defects in material and workmanship for one year from the date of installation. The warranty includes parts and labor, provided an In-Sink-Erator Factory Authorized Service Center performs the service. *This warranty does not apply if the failure is due to: faulty or improper electrical installation, faulty or improper plumbing installation, product abuse or misuse, accidental damage, grinding elements jammed by foreign objects, clogged drain lines, or an improperly sized unit (as specified by In-Sink-Erator).*

Commercial disposer accessories are included in this warranty only if they are included in the original disposer purchase package.

Introduction

The In-Sink-Erator commercial food waste disposer is UL Listed when installed in conjunction with In-Sink-Erator mounting adaptors and controls (see Figure 1 for a typical installation).

See Table 1 on page 3 for the approved disposer/mounting adaptor combinations. See Table 3 for the approved disposer/control combinations.

Important – These installation instructions are for the benefit of the installing contractor. In-Sink-Erator and/or In-Sink-Erator Factory Authorized Service Centers do not make original installations. For technical information not covered in these instructions, contact the supplier, an In-Sink-Erator Field Sales Representative, or the In-Sink-Erator Factory in Racine, Wisconsin at 1 (800) 558-5712
CST 7:30 am - 4:30 pm.

CLEAN THE DRAIN LINE

With a drain line auger, clear away all hardened waste material in the horizontal drain pipe running from the drain trap to the main waste line.

TYPICAL INSTALLATION

A typical commercial disposer installation incorporates the following connections (see Figures 1 and 9):

- Water shut off valve
- Syphon breaker
- Solenoid valve
- Start/stop switch
- Sink or trough
- Flow control valve


REQUIRED TOOLS/MATERIALS

The following items are needed to install the disposer:

- Screwdriver
- Adjustable wrench
- Pipe wrench
- Wire nuts
- 7/16" nut driver

The following items may be needed to install the disposer:

- Plumbing putty
- Hacksaw
- Drain auger

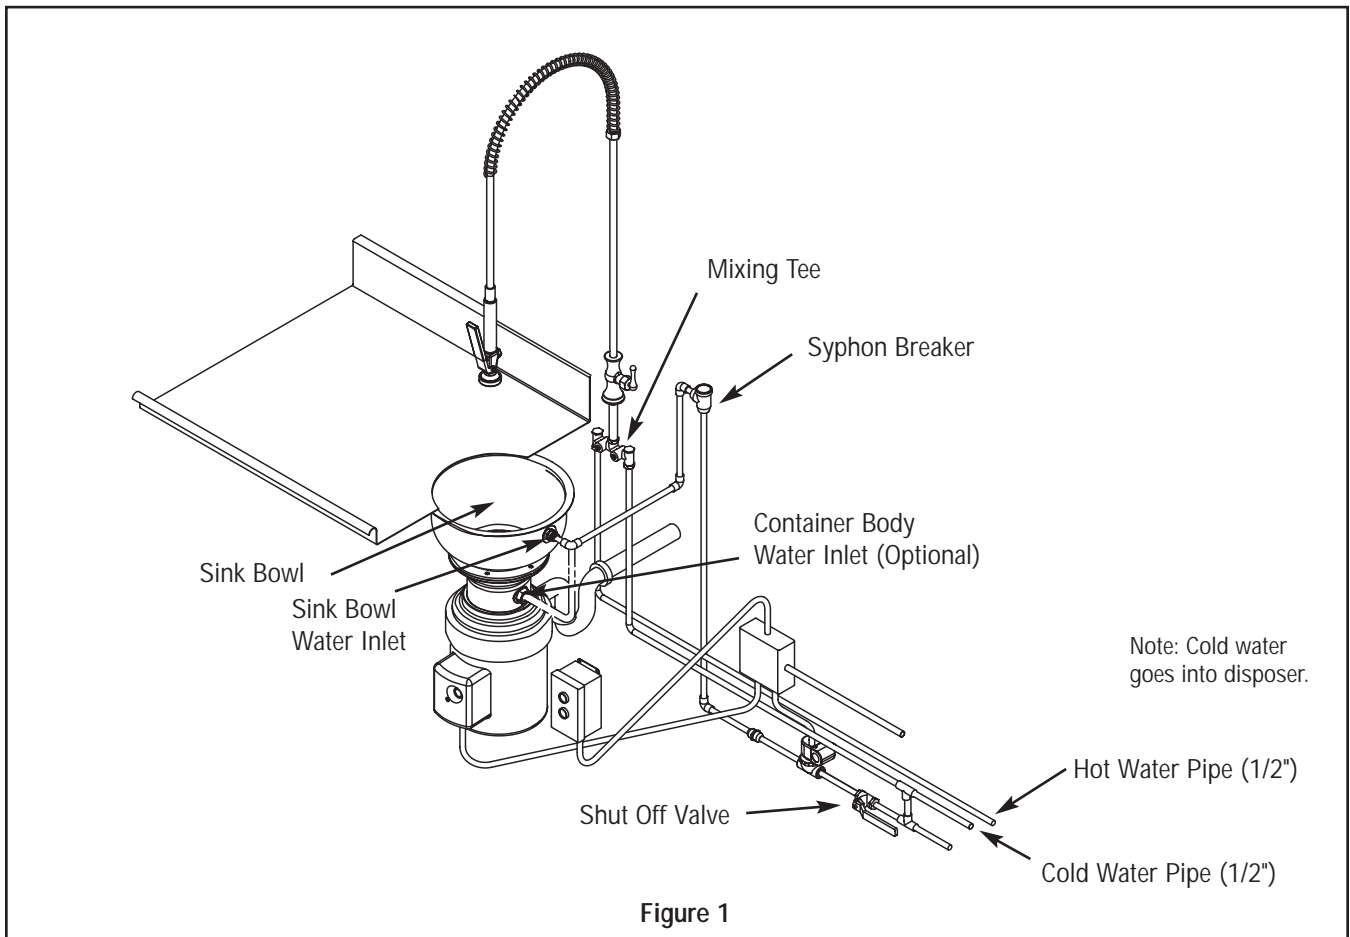

Installing the Disposer

⚠ WARNING

Personal Injury

- For safe operation, install the disposer in compliance with the minimum distance illustrated in Figure 2.
- Moving shredder parts may cause serious injury if a hopper or cone is not properly installed.

Required Mounting Area

A= The minimum required distance from the table top or trough to the mounting flange is 6 inches for standard body disposers (as specified by UL) (see Figure 2).

In-Sink-Erator recommends a minimum countertop thickness of 16 gage stainless steel.

Mounting Adaptors

There are two adaptor categories for mounting In-Sink-Erator disposers: Standard & Special Mountings. Table 1 displays the approved disposer / mounting adaptor combinations.

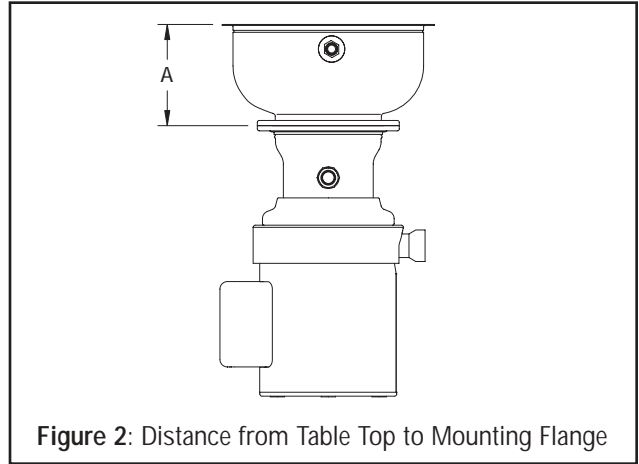


Figure 2: Distance from Table Top to Mounting Flange

	Adaptor	SS-50	SS-75	SS-100	SS-125	SS-150	SS-200	SS-300	SS-500	SS-750	SS-1000
Standard	12" Sink	X	X	X	X	X	X	X	X	X	X
	15" Sink	X	X	X	X	X	X	X	X	X	X
	18" Sink	X	X	X	X	X	X	X	X	X	X
	No. 5	X	X	X	X	X	X	O	O	O	O
	No. 5 short	X	X	X	X	X	X	O	O	O	O
	No. 6	X	X	X	X	X	X	X	X	X	X
	No. 7	X	X	X	X	X	X	X	X	X	X
Special	Outward Flange	X	X	X	X	X	X	X	X	X	X
	Inward Flange	X	X	X	X	X	X	X	X	X	X
	Straight Flange	X	X	X	X	X	X	X	X	X	X

X= Approved
O= Not Allowed

Table 1: Commercial Disposer/Mounting Adaptor Combinations


Standard In-Sink-erator Mountings

5 MOUNTING ASSEMBLY

Follow these instructions to install a #5 sink flange to a standard 3 1/2 - 4 inch sink opening.

1. Unscrew the three backup screws (6) until they are flush with the upper mounting flange (5) surface. Pry the retainer ring (7) free from the strainer flange (2) with a screwdriver and separate all mounting assembly parts (2 - 7).
2. Form a 3/4" thick ring of top grade oil base putty around the sink opening (use non-hardening putty). Insert the strainer flange (2) into the sink opening and press firmly in place. Clean away any excess putty.
3. From underneath the sink, place the strainer flange gasket (3), backup flange (4) - flat side up, and upper mounting flange (5) over the strainer flange and hold them up to the sink. Snap the retainer ring (7) into the groove on the strainer flange to hold the mounting parts in place.
4. Tighten the three backup screws evenly until the backup flange draws snugly against the underside of the sink and the strainer flange is held securely in place.
5. Place the body flange (9 - lugs upward) over the lip of the mounting flange (10) and fit the mounting gasket (8) onto the lip.
6. Place the mounting gasket (11) on the disposer body flange. Secure the mounting flange (10) to the disposer body flange with six screws (12) provided.
7. Raise the disposer to the upper mounting flange (5) so the body flange (9) is positioned with the lugs to the right of the screws.
8. While supporting the disposer, turn the body flange (9) to the right until all three lugs are engaged in the mounting flange (5). Swivel the disposer to align the discharge outlet with the drain trap. The disposer can be turned 360 degrees.
9. Align the disposer to the plumbing connection and insert the service wrench into the left side of a lug and continue to turn the body flange to the right (approximately one quarter turn) until it locks onto the notches on the upper mounting flange.



NOTE: Special mounting instructions are included in the #5 Short Mounting Kit.

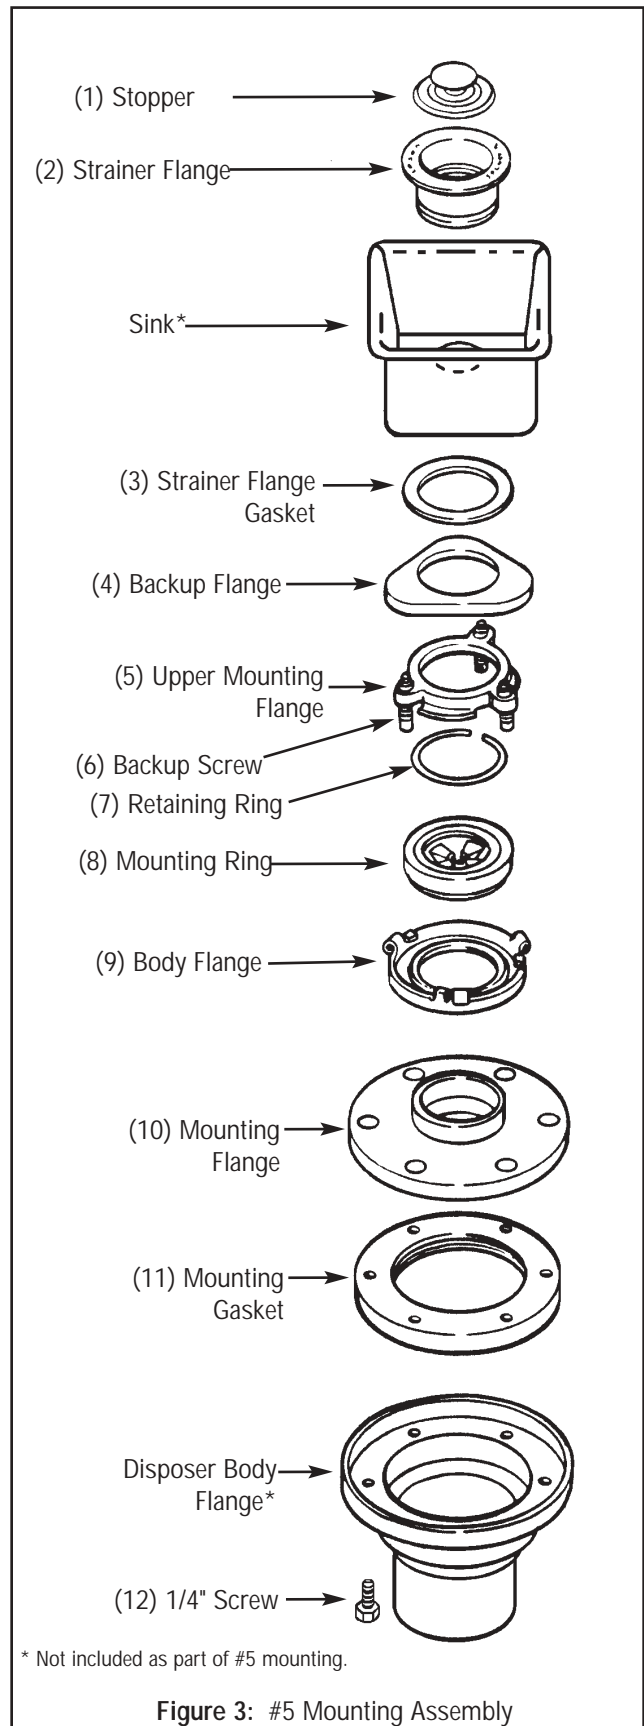

Standard In-Sink-Erator Mountings




#6, #7, & SINK BOWL MOUNTING ASSEMBLIES

1. Place the mounting flange (1) over the existing collar adaptor connection lip or sink bowl flange (this may require some force).
2. Push the mounting flange up out of the way and fit the groove in the mounting gasket (2) onto the connection lip. Make sure the gasket is fully seated on the flange.
3. Push the mounting flange down over the mounting gasket, fitting the threaded mounting flange fasteners into the recesses in the top of the mounting gasket.
4. From the bottom, insert two screws through opposite sides of the flat gasket (3) and mounting flange, into the threaded fasteners in the existing flange. The flat gasket is used only in the #6 mounting assembly. The screws should protrude about 1/4 inch below the mounting gasket.
5. Position the disposer beneath the mounting gasket and raise it to engage the two protruding screws in the disposer body flange keyhole slots. Secure the remaining screws and position the disposer correctly for the plumbing connections. For 3-10 H.P. disposers, adjust the legs to support the disposer.

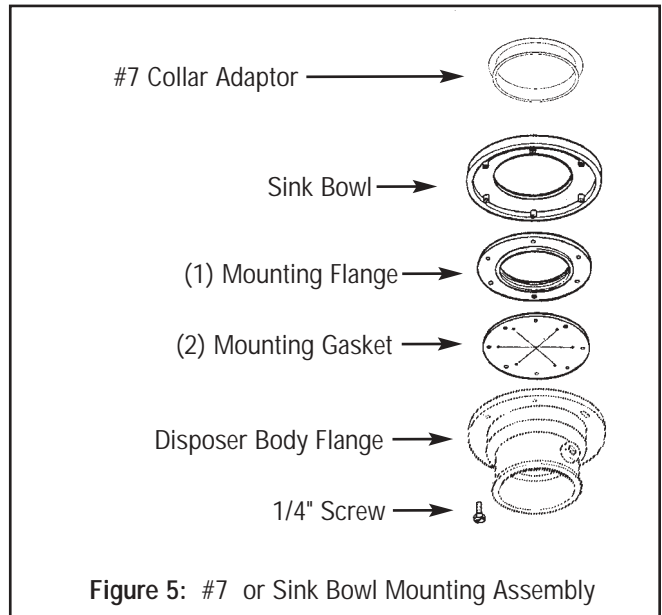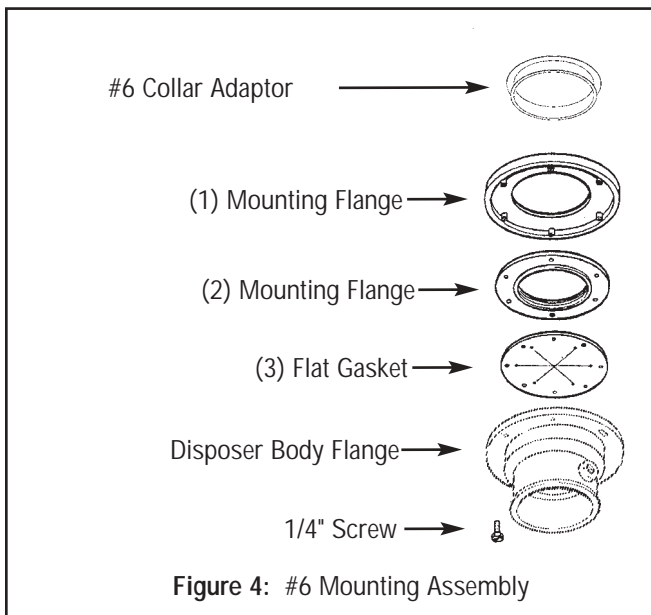

Special In-Sink-Erator Mountings

When installing an In-Sink-Erator commercial disposer to a non-In-Sink-Erator style sink bowl, a special mounting adaptor kit is required. The special mountings are described in the Mounting Adaptor Selection Guide (for more information, call 1-800-558-5712). Figures 6-8 show examples of non-In-Sink-Erator style sinks. (Mounting instructions are included in each special mounting adaptor kit.)

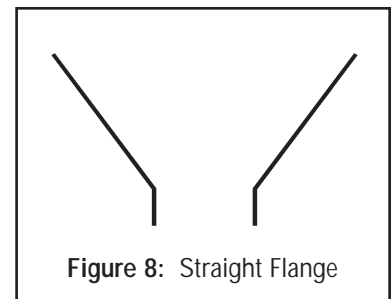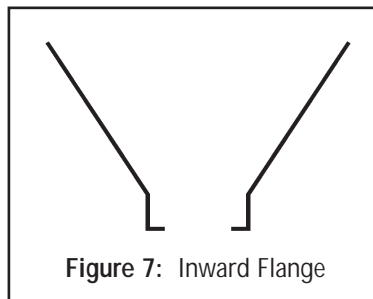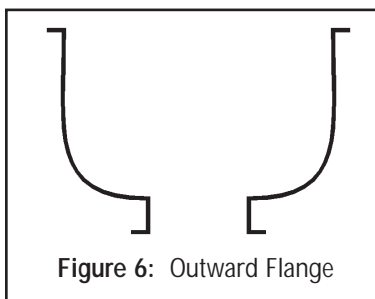

Plumbing

Drain Line Connections

To allow easy access to overload reset button, the disposer plumbing should be connected with the electrical control box facing the operator.

When connecting the drain line, place the "P-trap" as close to the disposer outlet flange as possible. Do not connect the drain line to a grease trap, interceptor, or drum trap.

All horizontal runs should be as short as possible, with a minimum fall of 1/4-inch per foot.

⚠ CAUTION

Property Damage

These plumbing instructions were written for an experienced competent installer. If the installer is not experienced in plumbing installation, In-Sink-Erator recommends that competent professional assistance is sought. Damage to the disposer or accessories as a result of improper installation is not covered under warranty. All installations must comply with local plumbing codes.

Water Supply Connections

When connecting the disposer to the incoming water supply, use as few elbows and tees as possible. Connect to the cold water line only. All water line fittings are 1/2" NPT except the sink bowl nozzles (1/2" compression).

Install the flow control valve, water solenoid valve, and the syphon breaker according to the direction of the flow arrows marked on each valve body (see Figure 9).

NOTE: A syphon breaker must be installed above the sink flood plane per local plumbing codes.

⚠ CAUTION

Property Damage

- The single phase Mini Waste Xpress is wired for 208-230v. To operate at 115v the auger motor must be re-wired as shown in Figure 11-5.
- The three phase Mini Waste Xpress is wired for 460v or 208-230v. The wiring information for each is shown in Figure 11-6.

Disposer	Water Flow GPM (Liters)	Drain Line Diameter
SS-50	3 (11)	1 1/2"
SS-75	3 (11)	1 1/2"
SS-100	5 (19)	1 1/2"
SS-125	5 (19)	2" NPT
SS-150	7 (26)	2" NPT
SS-200	7 (26)	2" NPT
SS-300	8 (30)	3" NPT
SS-500	8 (30)	3" NPT
SS-750	10 (38)	3" NPT
SS-1000	10 (38)	3" NPT

Table 2: Recommended Cold Water Flow and Drain Line Diameter

Routing Water Flow

- In a **trough system**, route all water flow to the end of the trough to flush food waste.
- In a **sink bowl system** with an **SS50 to SS-125** (3-5 GPM), route all water through the sink bowl (see Table 2).
- In a **sink bowl system** with an **SS-150 to SS-1000** (7 - 10 GPM), route water through the sink bowl and the disposer body inlet.

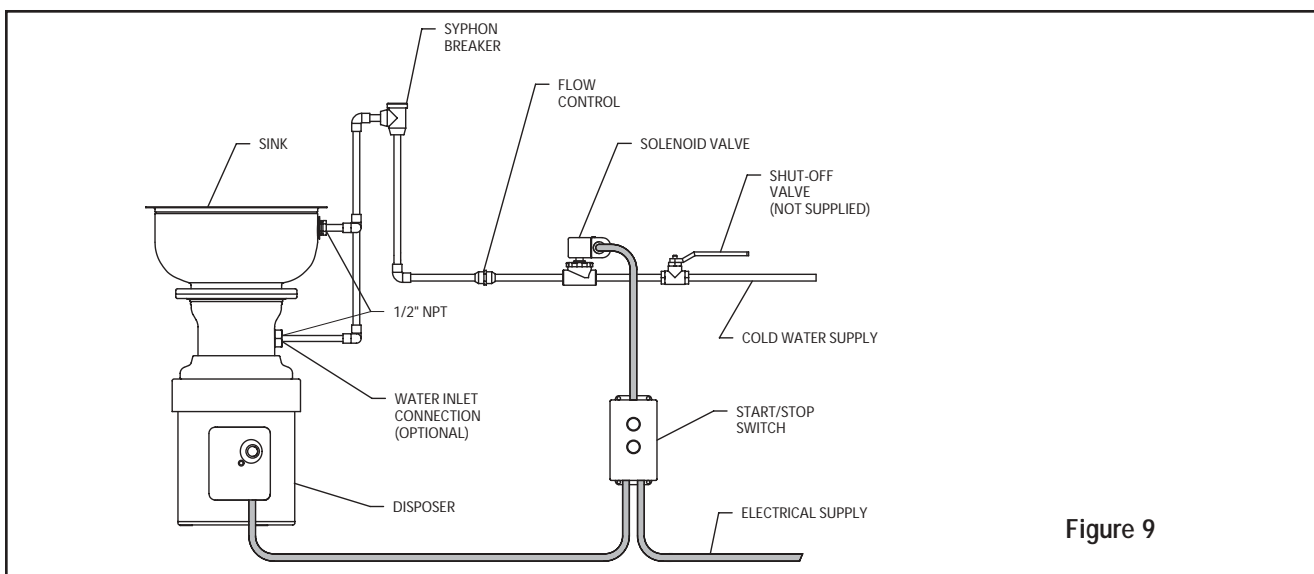


Figure 9

Electrical

⚠ WARNING

Electrical Shock

- Turn off the electrical supply to the disposer before servicing. Test the circuit with a volt meter or circuit tester to ensure the power is off.
- All control centers and disposers must be grounded.
- A properly fused disposer control (with a marked "off" position) that disconnects all ungrounded supply conductors must be installed at the electrical supply source.

Personal Injury/Property Damage

If the electrical installer is not experienced in electrical installation, we recommend seeking competent professional assistance. Disposer or accessory damage due to improper installation is not covered under warranty. All installations must comply with local electrical codes.

⚠ CAUTION

Property Damage

- Disposers shipped from the factory are **not** wired for a specific voltage. Refer to the motor connection wiring diagram in the terminal box for voltage instructions.
- Ensure the disposer motor voltage and phase match that of the electrical supply.

Disposer Controls

Install the disposer controls within sight of the disposer (per local codes) so the disposer can be reached easily in an emergency situation. In-Sink-Erator approved disposer/control combinations are listed in Table 3.

Model	Phase	Manual Start Switch	Manual Reverse Switch	Magnetic Starter Switch	CC202	CC101	AS101
SS-50	1	X	X	X	X	X	X
SS-50	3	X	X	X	X	X	X
SS-75	1	X	X	X	X	X	X
SS-75	3	X	X	X	X	X	X
SS-100	1	X	X	X	X	X	X
SS-100	3	X	X	X	X	X	X
SS-125	1	X	X	X	X	X	X
SS125	3	X	X	X	X	X	X
SS150	1	X	X	X	X	X	X
SS-150	3	X	X	X	X	X	X
SS-200	1	X	X	X	X	X	X
SS-200	3	X	X	X	X	X	X
SS-300	3	0	X	X	X	X	X
SS-500	3	0	X	X	X	X	X
SS-750	3	0	0	0	X	X	X
SS-1000	3	0	0	0	X	X	X

X= Approved
0= Not Available

Table 3: Disposer/Control Combinations

Electrical Connections

To connect the disposer to the electricity:

1. Remove the screw in the center of the disposer terminal box.
2. Pull the terminal box out of the stainless-steel trim shell.
3. Connect an electrical conduit connector to the hole in the bottom of the exposed wiring compartment.
4. Connect the ground wire to the ground screw.
5. Connect the incoming wires to the motor leads. Make sure the wiring connections are the same as those on the motor control wiring diagram for your specific control (see pages 10 - 16).
6. Reinstall the terminal box cover on the trim shell.

⚠ WARNING

Electrical Shock

Be careful not to pinch or damage the electrical wires when installing the terminal box.

NOTE: Complete electrical information is located inside the disposer terminal box.

7. Test the disposer to ensure the cutting elements revolve and the water flows automatically. Make sure the disposer is securely mounted and does not leak from any of the connections.

Operating Instructions

Operating the Disposer

1. Make sure there are no foreign objects in the disposer grind chamber. Do not pre-load the disposer with food waste prior to starting.
2. Push the start button on the control switch. The disposer will run and water will flow into the disposer.
3. Feed food waste into the disposer in a steady, continuous flow.
4. When all food waste is flushed away, push the stop button on the control switch.

NOTE: The Manual Reversing Switch has a center OFF and a left or right ON position. The disposer will run in the direction the switch is pushed. DO NOT restart the disposer until the shredder has come to a stop.

Grinding Tips

- Ensure that a steady stream of cold water runs into the disposer while it is operating (see Table 2 for the recommended cold water flow).
- Do not overload the disposer or turn it off with food waste inside the grind chamber. Run the disposer and water for three minutes after the final load to flush away all food waste.

WARNING

Personal Injury

- Food waste disposers are designed to grind and dispose of normal food waste. Inserting materials or items other than food waste into the disposer could cause personal injury and/or disposer damage.
- To reduce the risk of injury from materials that may be expelled from the disposer grind chamber, ensure that the disposer baffle is properly installed.
- To prevent the ejection of food waste and to keep foreign material out of the grind chamber, replace the splash baffle when it becomes worn.
- Do not put any of the following items into the disposer: clam or oyster shells, drain cleaner, glass, china, plastic wrap, large bones, metal objects, explosive materials, extremely hot water, grease, oil, or syrup.
- Turn the power off before attempting to clear a jam, remove an object, or press the reset button.
- Do not insert your fingers into the disposer. Use long-handled tongs or pliers to remove objects from the disposer.
- Loosen any jams with the dejamming bar.
- Be certain that all persons who will operate the disposer read the safety and operating instructions prior to operating the disposer.
- To prevent accidents, ensure that the disposer is turned off before you leave the area.

WARNING

Fire Hazard

To minimize the possibility of fire, do not store flammable items near the disposer. Do not use or store gasoline or other flammable liquids near the disposer.

Electric Shock

- Disconnect the electrical supply before servicing the disposer.
- Ensure the disposer and controls are properly grounded.

Troubleshooting

Troubleshooting for problems other than what is listed below should be performed by a qualified service person. Troubleshooting performed by untrained personnel could result in electrical shock or damage to the disposer. Disconnect power before servicing.

PROBLEM	POSSIBLE CAUSE	SOLUTION
The disposer will not start and water does not flow.	No incoming power.	Turn on electrical supply.
The disposer will not start but water flows.	<p>The disposer overload protector is tripped.</p> <p>The disposer is jammed.</p>	<p>Turn control to the off position and press the red reset button on the disposer.</p> <p>Turn the control to the off position and complete the following steps:</p> <ol style="list-style-type: none"> 1. Insert dejamming bar (not supplied) slot down through the sink opening. Place the slot over one end of the raised bars found on the top of the rotating shredder. 2. Using an adjustable wrench or a pipe wrench for leverage, twist the dejamming bar back and forth to free the jam. The rotating shredder should revolve freely when the jam is released. 3. Remove all foreign material that caused the stoppage. 4. Allow the disposer to cool for 3-5 minutes after it stops running. Press the red reset button to reset the overload protector. Never strike the reset button with an object. 5. If the disposer remains inoperative after following these steps, contact the nearest In-Sink-Erator Factory Authorized Service Center. You may obtain the telephone number of the Service Center nearest you by calling 1-800-558-5700.
The disposer motor stops while grinding, but water continues to flow.	<p>The disposer is jammed.</p> <p>The disposer overload protector is tripped.</p>	<p>See <i>The disposer is jammed</i>, above.</p> <p>Turn the control to the off position and press the red reset button on the disposer. If the disposer was running, allow the unit to cool for 3-5 minutes before pressing the red reset button. Never strike the reset button with an object.</p>
The water flows continuously before the controls are turned on.		Reinstall the water solenoid valve with the arrow on the valve pointing in the direction of the water flow.
Overload protector trips frequently.	Disposer is overloaded with food waste.	Do not overload disposer with excessive amounts of food waste.

Wiring Diagrams

Electrical Connections

These electrical diagrams are recommended for the most commonly used accessory combinations. **Wiring diagrams for the MSLV, CC202, CC101, and AS101 are supplied with the product.**

NOTES: • All electrical connections must comply with local electrical codes.

- Pressure switches may be connected across the line at 5 horsepower or less. Larger horsepower motors require connection in the pilot circuit of a magnetic starter.
- The magnetic and manual starters supplied by In-Sink-Erator do not require heaters to complete the circuit. In-Sink-Erator disposers are equipped with overload protectors.
- A time delay may only be used with a water solenoid valve.

⚠ DANGER

Electrical Shock


- Turn off all electrical supply to the disposer before attempting any work on it. Use a voltmeter or circuit tester to ensure power is off.
- Installation must conform to all local electrical codes.
- All control centers and disposers must be carefully and permanently grounded.
- A properly fused disconnect must be installed at the electrical supply source for the control center.

⚠ CAUTION


Property Damage

- Ensure that the control center voltage and phase match the disposer motor and electrical supply. Check nameplates on disposers and control centers for voltage and phase specification.
- The disposer motor wiring connection is shown in the disposer terminal box.


Disposer Motor Wiring

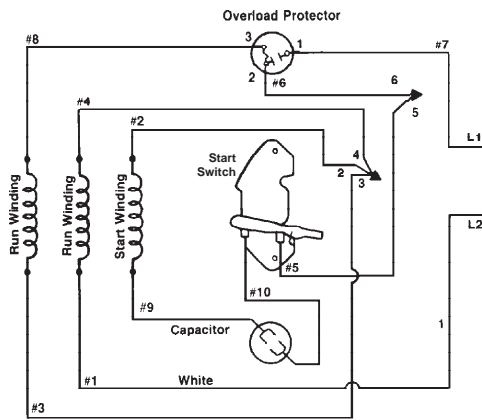


208/230 Volts
50/60 HZ
Single Phase

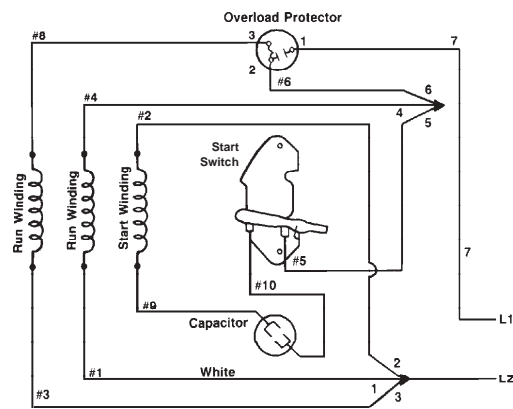

120 Volts
50/60 HZ
Single Phase

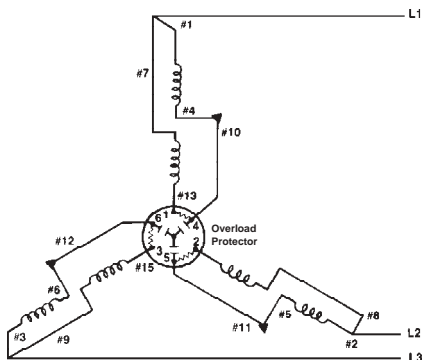

208/230 Volts
50/60 HZ
Three Phase

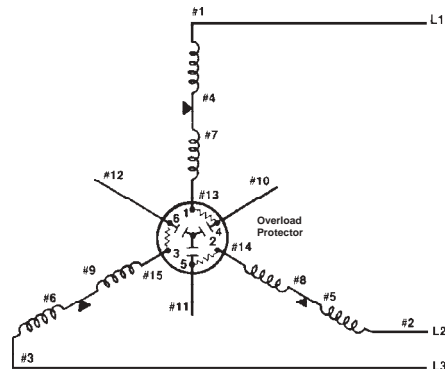

380/460 Volts
50/60 HZ
Three Phase

Wiring Diagrams

⚠ DANGER

Electrical Shock

- Turn off all electrical supply to the disposer before attempting any work on it. Use a voltmeter or circuit tester to ensure power is off.
- Installation must conform to all local electrical codes.
- All control centers and disposers must be carefully and permanently grounded.
- A properly fused disconnect must be installed at the electrical supply source for the control center.


⚠ CAUTION

Property Damage

- Ensure that the control center voltage and phase match the disposer motor and electrical supply. Check nameplates on disposers and control centers for voltage and phase specification.
- The disposer motor wiring connection is shown in the disposer terminal box.


MANUAL STARTING SWITCHES

Manual Starting (On/Off) Switch

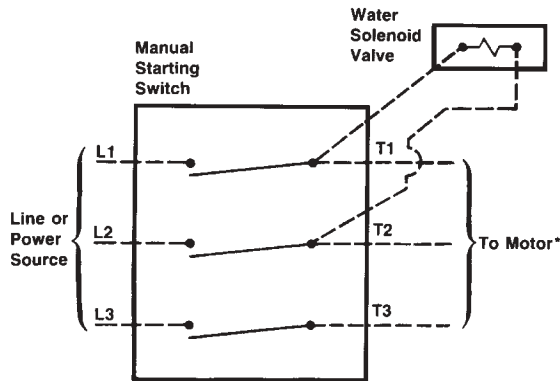


All voltages.
Do not use L3 and T3 for single phase applications.

Manual Starting (On/Off) Switch - With Time Delay Relay

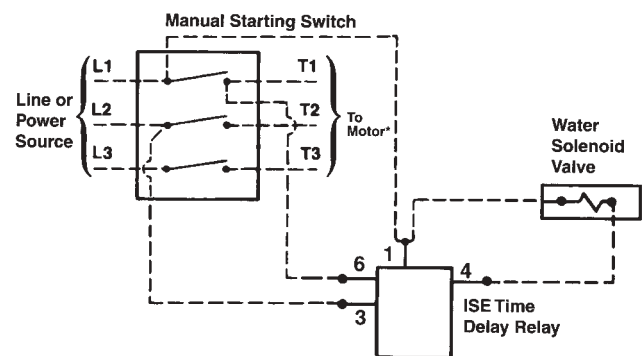

All voltages except 460 volts.
Do not use L3 and T3 for single phase applications.

Manual Starting (On/Off) Switch - With Pressure Switch

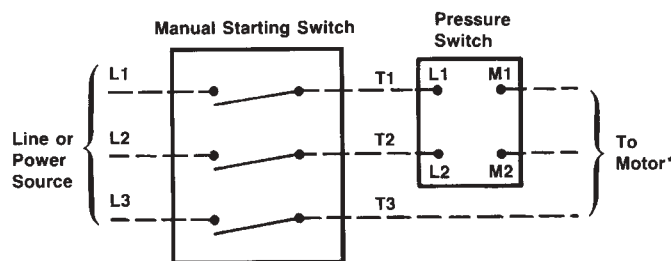

All voltages 1/2 HP thru 5 HP.
Do not use L3 and T3 for single phase applications.

See standard motor connection wiring diagram in motor terminal box.

Wiring Diagrams

⚠ DANGER

Electrical Shock


- Turn off all electrical supply to the disposer before attempting any work on it. Use a voltmeter or circuit tester to ensure power is off.
- Installation must conform to all local electrical codes.
- All control centers and disposers must be carefully and permanently grounded.
- A properly fused disconnect must be installed at the electrical supply source for the control center.

⚠ CAUTION

Property Damage


- Ensure that the control center voltage and phase match the disposer motor and electrical supply. Check nameplates on disposers and control centers for voltage and phase specification.
- The disposer motor wiring connection is shown in the disposer terminal box.

Manual Starting (On/Off) Switch - With Time Delay Relay

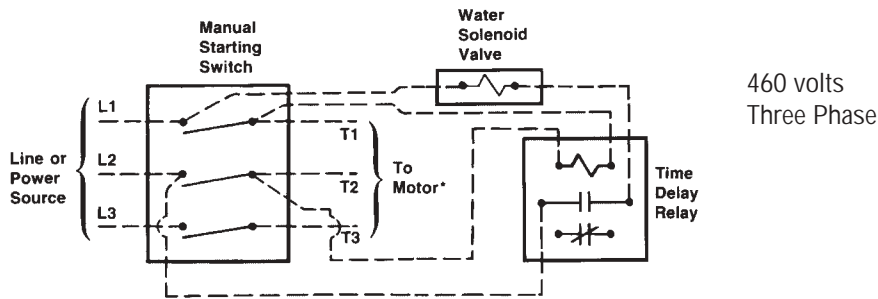

SINGLE PHASE MANUAL REVERSING SWITCHES

Manual Single Phase Reversing Switch

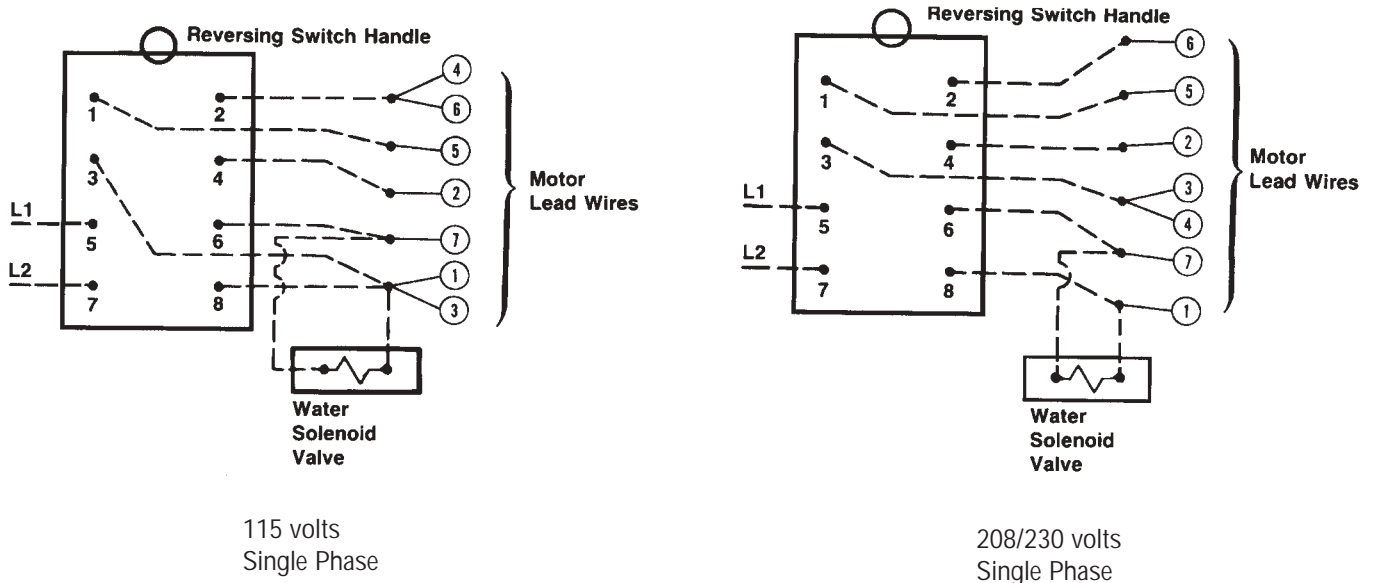

Wiring Diagrams

⚠ DANGER

Electrical Shock



- Turn off all electrical supply to the disposer before attempting any work on it. Use a voltmeter or circuit tester to ensure power is off.
- Installation must conform to all local electrical codes.
- All control centers and disposers must be carefully and permanently grounded.
- A properly fused disconnect must be installed at the electrical supply source for the control center.

⚠ CAUTION

Property Damage

- Ensure that the control center voltage and phase match the disposer motor and electrical supply. Check nameplates on disposers and control centers for voltage and phase specification.
- The disposer motor wiring connection is shown in the disposer terminal box.

Manual Single Phase Reversing Switch - With Time Delay Relay

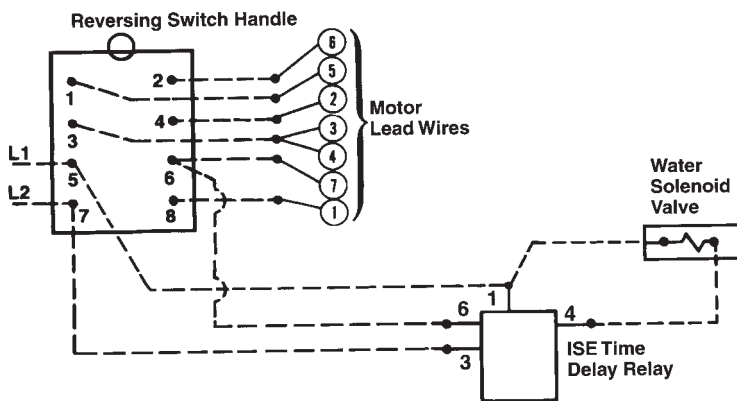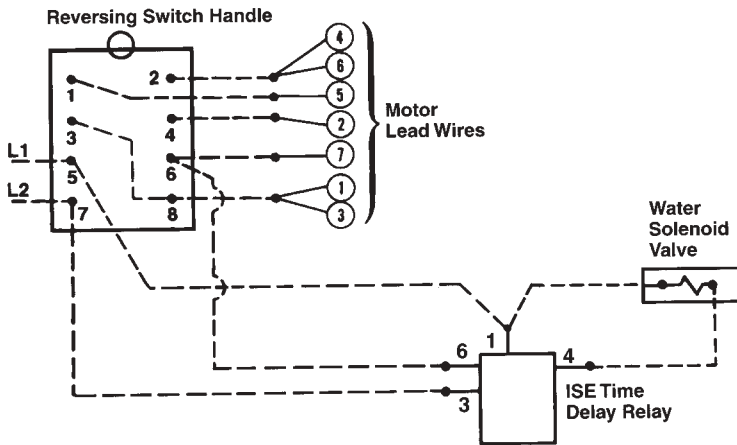

Wiring Diagrams

⚠ DANGER

Electrical Shock

- Turn off all electrical supply to the disposer before attempting any work on it. Use a voltmeter or circuit tester to ensure power is off.
- Installation must conform to all local electrical codes.
- All control centers and disposers must be carefully and permanently grounded.
- A properly fused disconnect must be installed at the electrical supply source for the control center.


⚠ CAUTION

Property Damage

- Ensure that the control center voltage and phase match the disposer motor and electrical supply. Check nameplates on disposers and control centers for voltage and phase specification.
- The disposer motor wiring connection is shown in the disposer terminal box.


THREE PHASE MANUAL REVERSING SWITCHES

Manual Three Phase Reversing Switch - With Time Delay Relay

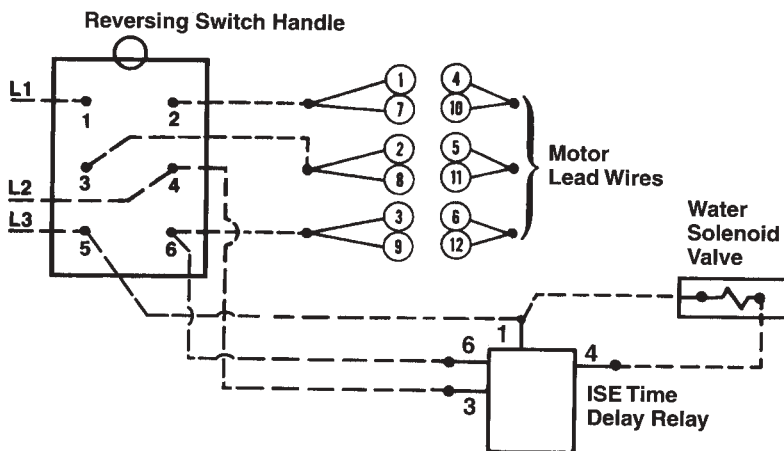

208 volts
Three Phase

12 Lead Motor

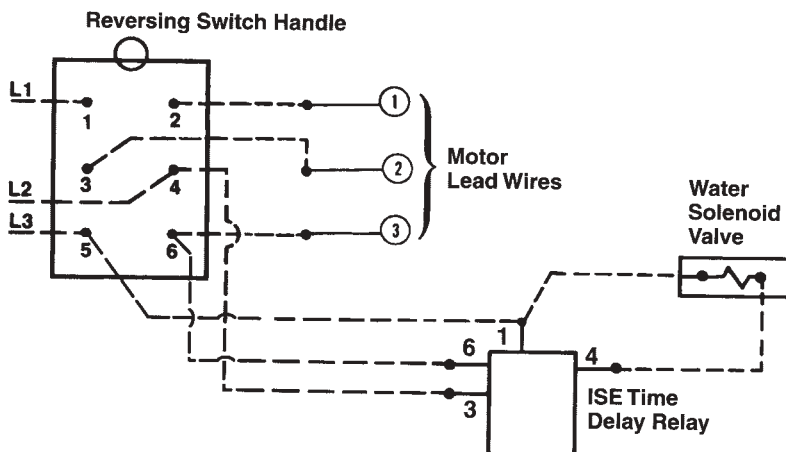

208 volts
Three Phase

Single Voltage
Motor Only
3 Lead Motor

Wiring Diagrams

⚠ DANGER

Electrical Shock

- Turn off all electrical supply to the disposer before attempting any work on it. Use a voltmeter or circuit tester to ensure power is off.
- Installation must conform to all local electrical codes.
- All control centers and disposers must be carefully and permanently grounded.
- A properly fused disconnect must be installed at the electrical supply source for the control center.


⚠ CAUTION

Property Damage


- Ensure that the control center voltage and phase match the disposer motor and electrical supply. Check nameplates on disposers and control centers for voltage and phase specification.
- The disposer motor wiring connection is shown in the disposer terminal box.

THREE PHASE MANUAL REVERSING SWITCHES

Manual Three Phase Reversing Switch - With Time Delay Relay

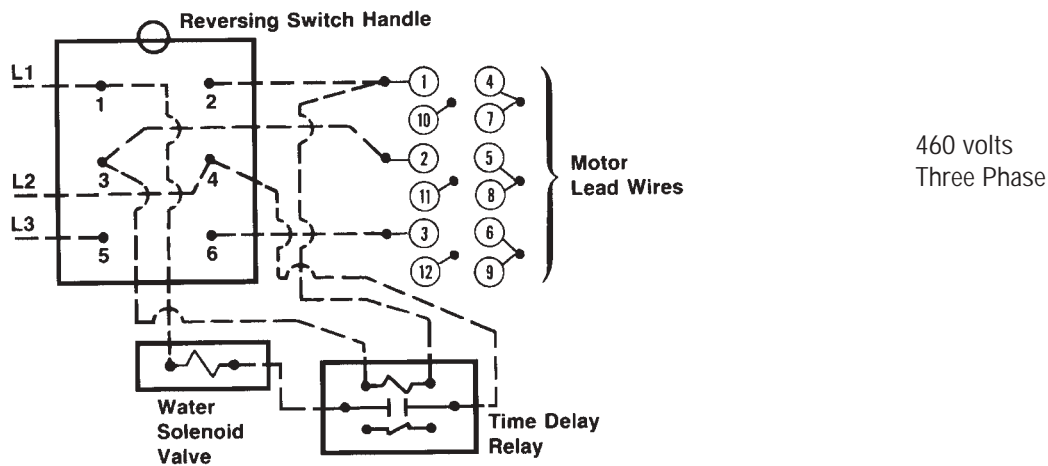

Manual Three Phase Reversing Switch

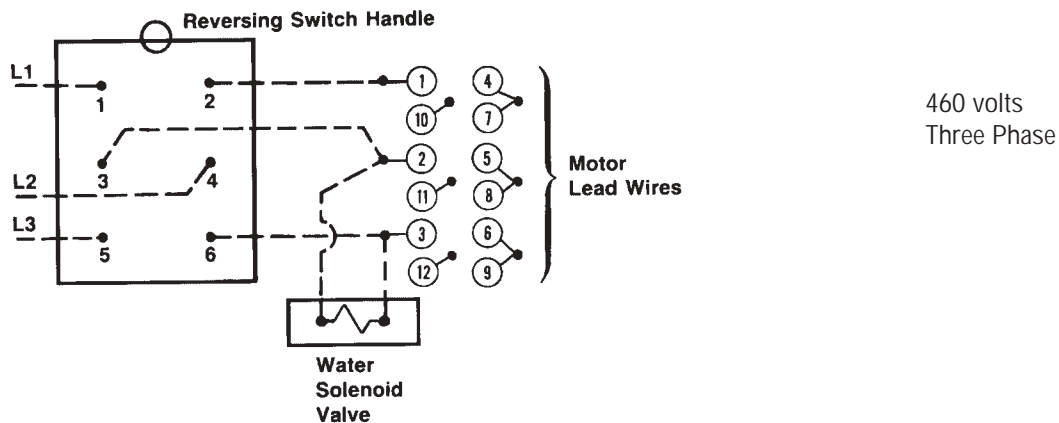

Wiring Diagrams

⚠ DANGER

Electrical Shock


- Turn off all electrical supply to the disposer before attempting any work on it. Use a voltmeter or circuit tester to ensure power is off.
- Installation must conform to all local electrical codes.
- All control centers and disposers must be carefully and permanently grounded.
- A properly fused disconnect must be installed at the electrical supply source for the control center.

⚠ CAUTION


Property Damage

- Ensure that the control center voltage and phase match the disposer motor and electrical supply. Check nameplates on disposers and control centers for voltage and phase specification.
- The disposer motor wiring connection is shown in the disposer terminal box.

Manual Three Phase Reversing Switch

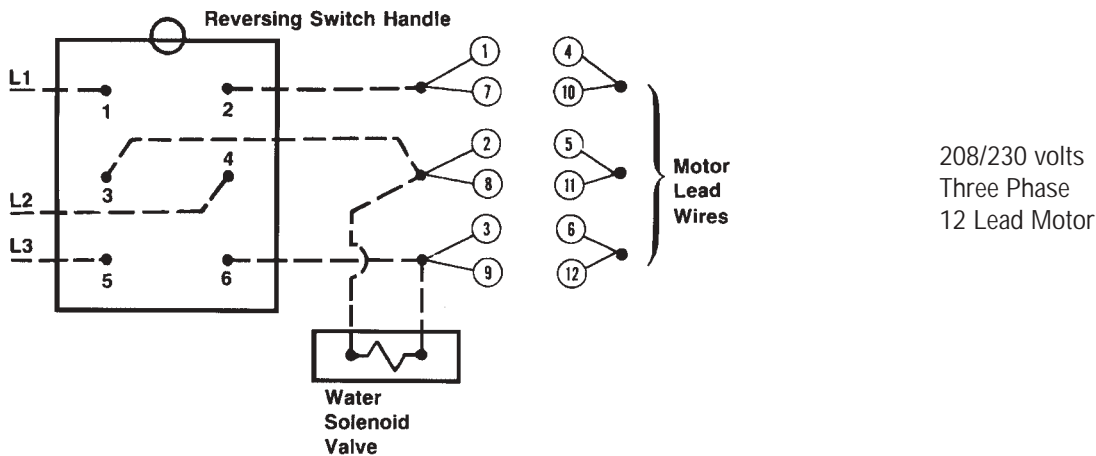

STANDARD MOTOR CONNECTION WIRING DIAGRAMS

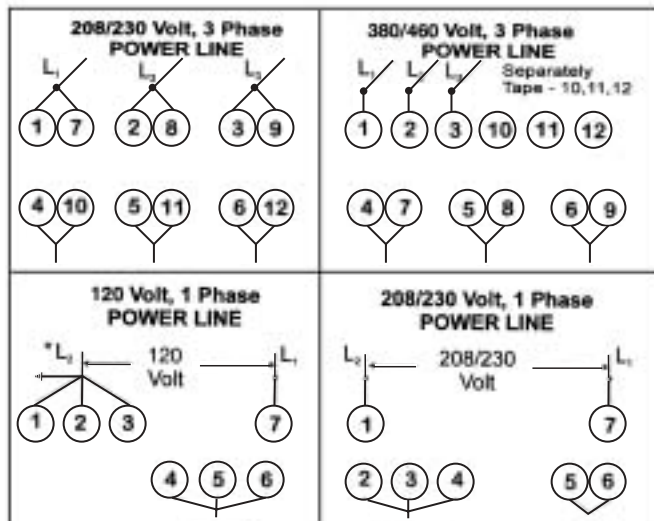

NOTE: Do not use this diagram to connect an optional reversing control. Refer to the diagram shipped with the disposer or control.

Do not wire the solenoid valve in series with the dispenser motor. Follow the wiring diagram shipped with the disposer.

When a grounded power input line is used as one of the supply lines it must be connected to the wire group containing lead #1.

